



front carrier

Assembly Guide

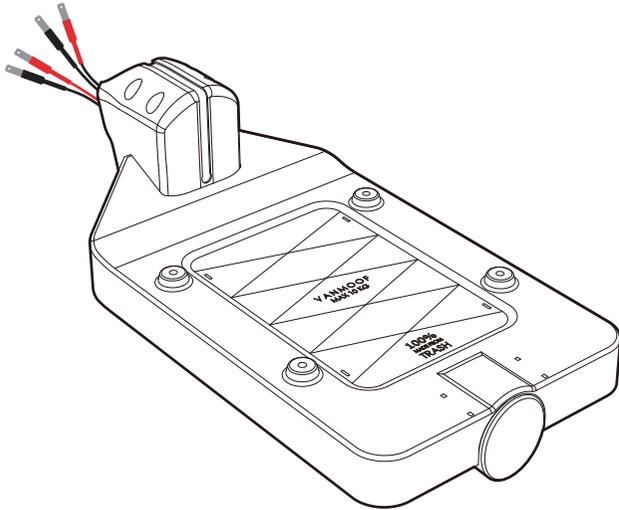


VANMOOF

PACKAGE CONTENT



clamp (right,left)
x2

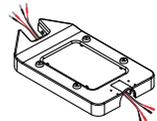

carrier
(including light wires*2)
x1



headtube
rubber dampener
x1



light
holder
x1



M5 cap
x2
M6 cap
x1



M6 screw
x1



M5 screw
x2



M5 washer
x2
M6 washer
x2



anti-theft Torx key
x1

TOOLS YOU NEED



#4, #5 allen key



10mm socket wrench




needle nose plier
(recommended)




rubber hammer



1 Use the anti-theft Torx key to take out the front light, and then disconnect the wires from the light.

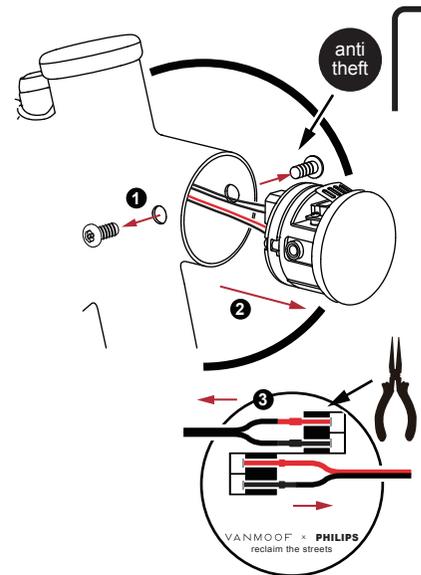


2 Connect the wires coming from the carrier to the light. The connectors with two BLACK wires go to the "In & ~" connection. The connectors with RED-BLACK wires go "to rear".

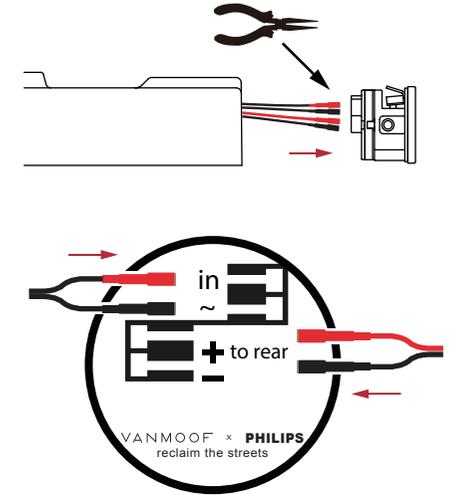


3 Assemble the light into the carrier and clip on the light holder. Check that the hooks of the light holder are well clipped into the carrier. Use the anti-theft Torx key to tighten the screws on each side of the light.

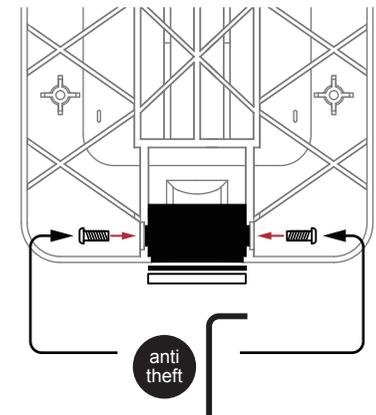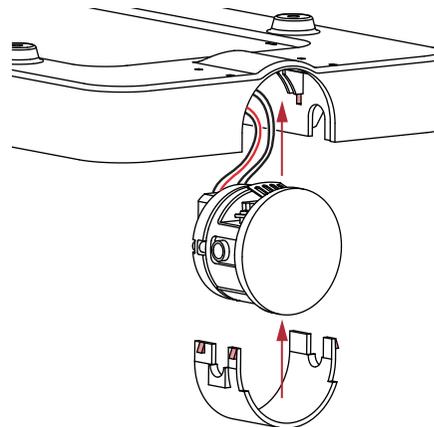

4 Put the head tube dampener on the clamp. The 3 pins on the dampener fit into the holes on the clamps.

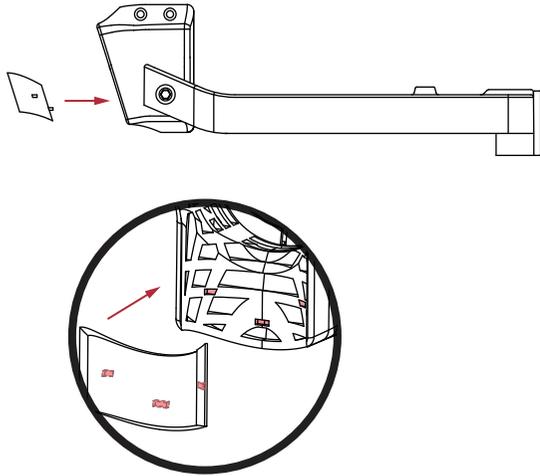

5 Connect the light wires and install the assembled front carrier. Push the front carrier as close to the frame as possible so that the pins on the inside of the clamp inserted into the holes at the front of the top tube.

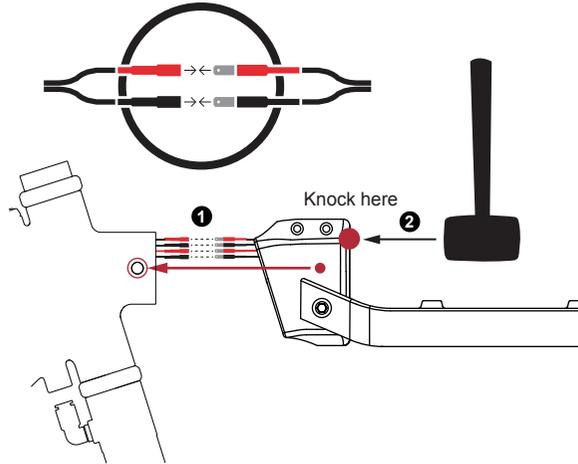

6 Fully tighten the M5 & M6 screws.

